



# Schilling

## Marking Systems GmbH

### Quick Start Label Printer CW-L300

Dear Customer,

Thank you very much for your trust and for purchasing this label printer CW-L300. This Quick Start guide will instantly allow you to produce your own labels and to start marking.

#### A ) Starting the Printer

1. Connect the printer to the power supply.
  2. Switch on the printer by pressing the blue **ON** key.
- Note:** A colour tape has already been put in for you for tests.
3. To change the language, press "**Function**" and "**Phrase Memory**" and choose your language by using the cursor keys **◀ ▶** and confirm with "**Set**".
  4. In the main menu, chose "Tape" by the cursor keys **◀ ▶** and confirm with "**Set**".
  5. In the sub menu "Tape", you now have the possibility to access "New" or "Saved Files".  
Chose the desired option by the cursor keys **◀ ▶** and confirm with "**Set**".

#### B ) Activating saved files

We have already pre-installed two models for you:

*Model V01*

Font: Sans-Serif ; Font Size: 1,50 mm ; Alignment: center on the display, "Small Font" will be shown on the right

*Model V02*

Font: Sans-Serif ; Font Hight: 2,20 mm ; Alignment: center

#### Access on Models

- 1.0 Chose model V01.....V02 by using **▲ ▼** and confirm with "**Set**".
- 2.0 Use the cursor key **▼** to go to "Eingabe" and delete the existing text with **DEL** and replace it by your new text.
- 3.0 Confirm the entered text by "**Print**".
- 4.0 The pre-adjustments are set on "1 copy" and "half cut".  
These adjustments are changeable. Example: If you need 3 single print outs of the same text, enter "3 copies" and "full cut". Press "**Print**" again.
- 7.1 You can change the models by using the cursor keys **◀ ▶ ▲ ▼**

#### C ) Free Design on Labels:

- 1.0 Switch on the printer by pressing the blue **ON** key.
- 2.0 Confirm "Tape" in the main menu with "**SET**".
- 3.0 Confirm "New" in tape menu with "**Set**".
- 4.0 Confirm "Free Design" in tape menu with "**Set**".
- 5.0 You can change the character heights by pressing "Size". In the following menu, chose "Character" by using **▲ ▼** and confirm with "**Set**".
- 5.1 Enter the requested font size.  
The font size can be adjusted in height and width from 1-5. Confirm with "**Set**".
- 5.2 Enter your text.
- 6.0 Confirm your text with "**Print**".
- 6.1 The pre-adjustments are set on "1 copy" and "half cut".  
These adjustments are changeable. Example: If you

need 3 single print outs of the same text, enter "3 copies" and "full cut". Press "Print" again.

- 6.2 Generally, you can change settings by using the cursor keys **◀ ▶ ▲ ▼** and by confirming with "**Set**".

- 6.3 The label is now being printed.

#### D ) Connecting the printer to a PC

- Step 1: Installing the Software
- Step 2: Connecting the printer to the PC

Step 1:

Before installing the Software, all user programs and anti virus programs must be closed.

Further, Adobe Reader 6.0 (or higher) should be installed. Our recommendation: Adobe Reader 7.0. You can download it from the internet.

Step 2:

Please read and follow the installation instructions carefully to avoid malfunctions.

#### E ) Further useful tips:

- 1.0 Guideline: Creating the Disc Label Data  
see manual, page 8.
- 1.1 Guideline: Creating a Tape Label  
see manual, page 16.
- 1.2 Specifying the Size of Text Lines  
see manual, page 33.
- 1.3 Tape Cut Modes and Types of Tape Cuts  
see manual, page 38-40.
- 1.4 Saving, Recalling and Deleting Labels  
see manual, page 54.
- 1.5 Configuring the Printer Setup  
see manual, page 55.
- 1.6 Troubleshooting  
manual, see pages 59-67.
- 1.7 Disc Label Formats and Numbering Formats  
see manual, pages 70-73.
- 1.8 You can change the text by using "Font" "Size" "Style" "Form" "Frame" "Illust" "Symbol" for the individual descriptions, please see the manual, pages 50-53 and 68-69.

#### Schilling Marking Systems GmbH

In Grubenaecker 1, DE-78532 Tuttlingen, Germany

Fon: +49 (0)7461 9472-0

Fax: +49 (0)7461 9472-28

mail: info@schilling-marking.com

net: www.schilling-marking.com